



**GIULIA**

**QUICK GUIDE**

**Dear Customer,**

We would like to congratulate and thank you for choosing an Alfa Romeo.

This Quick Guide will provide you with the main indications and some recommendations for the use of your car.

This Quick Guide is not a substitute for reading the full Owner Handbook, which is available online, in greater depth.

The figures in this guide are only examples. This might imply that some details of the image do not correspond to the actual arrangement of your car.

After reading it, you are advised to keep this Quick Guide inside the car, for an easy reference and for making sure it remains aboard the car should it be sold.

In the attached Warranty Booklet you will also find the description of the Services that Alfa Romeo offers to its customers, the Warranty Certificate and the detail of the terms and conditions for maintaining its validity.

We are confident that these will bring you closer to your new car and make you appreciate the assistance provided by Alfa Romeo team.

Enjoy reading. Happy driving!

**The data contained in this publication should be understood as intended to guide you in the correct use of the car.  
Alfa Romeo S.p.A. aims at a constant improvement of the vehicles produced. For this reason it reserves the right to make  
changes to the model described for technical and/or commercial reasons.  
For further information, contact an Alfa Romeo Dealership.**

## ONLINE OWNER HANDBOOK

FCA is committed to protecting the environment and invites you to refer to the Complete Owner Handbook in digital form, via the QR code on this page or on the internet pages listed below.



Go to the **[www.mopar.eu/owner](http://www.mopar.eu/owner)** website and access your personal area.

The "Warranty and Maintenance" page contains all the information about your car and a link to access eLUM, where you will find all the details of the online Owner Handbook.

Alternatively, to access this information, go to the Internet website at **<http://aftersales.fiat.com/elum/>**.

The eLUM website is free and conveniently allows you to browse the handbooks of all other models of the Group, among many other things.

Have a nice read and happy motoring!

# CONTENTS

<b>DASHBOARD</b> .....	<b>5</b>	<b>THE KEYS</b> .....	<b>12</b>	DEACTIVATING/ACTIVATING THE PASSENGER SIDE AIRBAGS: FRONT AIR BAG AND SIDE BAG (where provided).....	18
<b>AUTOMATIC DUAL-ZONE CLIMATE CONTROL SYSTEM</b> .....	<b>5</b>	<b>IGNITION DEVICE</b> .....	<b>12</b>	<b>REPLACING A BULB</b> .....	<b>19</b>
<b>DISPLAY</b> .....	<b>6</b>	<b>EXTERNAL LIGHTS</b> .....	<b>13</b>	<b>DRIVING TIPS</b> .....	<b>20</b>
<b>INSTRUMENT PANEL</b> .....	<b>6</b>	DIPPED BEAM HEADLIGHTS .....	13	<b>TYRE REPAIR KIT</b> .....	<b>20</b>
“HERITAGE” DISPLAY .....	6	DAYTIME RUNNING LIGHTS (DRL) (Daytime Running Lights) AND SIDE LIGHTS .....	13	PRELIMINARY OPERATIONS .....	20
“EVOLVED” DISPLAY .....	7	REAR FOG LIGHT .....	13	OPT1 KIT DESCRIPTION .....	20
“RELAX” DISPLAY .....	7	PARKING LIGHTS.....	13	OPT2 KIT DESCRIPTION .....	22
“Race” DISPLAY (Quadrifoglio versions).....	7	MAIN BEAM HEADLIGHTS .....	13	<b>FUSES</b> .....	<b>26</b>
<b>WARNING LIGHTS AND MESSAGES</b> .....	<b>8</b>	DIRECTION INDICATORS.....	13	<b>SCHEDULED SERVICING</b> .....	<b>27</b>
INSTRUMENT PANEL DISPLAY FAILURE.....	8	AUTO FUNCTION (Dusk sensor) .....	14	SERVICE SCHEDULE (2.9 V6 engine).....	27
RED WARNING LIGHTS/ SYMBOLS .....	8	<b>TPMS (Tyre Pressure Monitoring System)</b> .....	<b>14</b>	SERVICE SCHEDULE (2.0 T4 MAir engine) .....	29
AMBER WARNING LIGHTS/ SYMBOLS .....	9	<b>AUTOMATIC TRANSMISSION</b> .....	<b>15</b>	SERVICE SCHEDULE (2.2 JTD engine).....	31
GREEN WARNING LIGHTS/ SYMBOLS .....	11	GEAR LEVER.....	15	<b>REFILLING</b> .....	<b>33</b>
BLUE WARNING LIGHTS/ SYMBOLS .....	11	LEVERS ON THE STEERING WHEEL .....	15	<b>WHEELS</b> .....	<b>35</b>
WHITE WARNING LIGHTS/ SYMBOLS .....	11	<b>“ALFA DNA™” SYSTEM</b> .....	<b>16</b>	COLD TYRE INFLATION PRESSURES (psi/bar).....	35
LANE KEEPING ASSIST SYMBOLS .....	11	<b>MANUAL SOS CALL</b> .....	<b>17</b>	<b>CONNECT</b> .....	<b>36</b>
		<b>CHILD RESTRAINT SYSTEMS</b> .....	<b>18</b>	CONTROLS ON TUNNEL.....	36
		PASSENGER'S FRONT AIRBAG AND CHILD RESTRAINT SYSTEMS.....	18	WIDGETS.....	36

RADIO (TUNER) MODE ..... 37  
MEDIA MODE ..... 37  
PHONE MODE ..... 38  
NAVIGATION MODE ..... 38  
SETTINGS ..... 38  
PERFORMANCE ..... 39  
CAR INFORMATION ..... 39  
ALFA CONNECT SERVICES ..... 39

**OFFICIAL TYPE APPROVALS ..... 39**

RADIO EQUIPMENT ..... 39  
RADIO FREQUENCY DEVICES ..... 39

**SUPPLEMENTS**

EURO 6B.....



AUSTRALIA.....




## DASHBOARD




1 9550460

- (1) External light switch
- (2) Left stalk (external lights/LDW (Lane Departure Warning) system/LKA (Lane Keeping Assist) system)
- (3) Instrument panel features
- (4) Right stalk (Windscreen wiper)
- (5) Right-side steering wheel controls (interaction with Connect system)
- (6) Ignition device (START/STOP ENGINE)
- (7) Left-side steering wheel controls (Speed Limiter/ Cruise Control/ Active Cruise Control/ HAS (Highway Assist) system/TJA (Traffic Jam Assist) system)

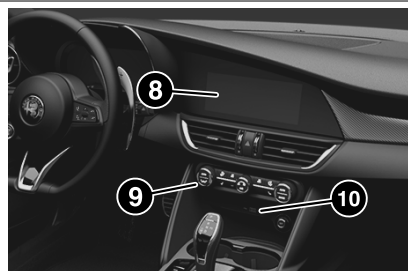

2 9550461


- (8) Connect system
- (9) Automatic dual-zone climate control system
- (10) 12V Power socket/ USB port

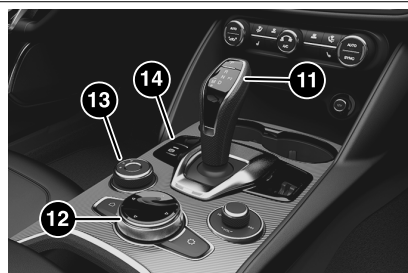

3 9550462




- (11) Gear lever
- (12) Rotary Pad/ Connect system interaction controls
- (13) Alfa DNA™ Pro system selector
- (14) Electric Parking Brake (EPB)
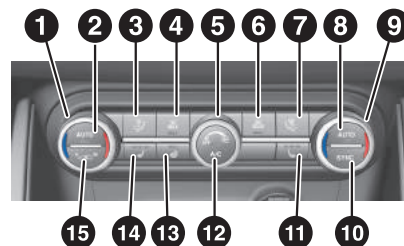
## AUTOMATIC DUAL-ZONE CLIMATE CONTROL SYSTEM




4 0415650770EM

- (1) Left-side temperature
- (2) **AUTO** Automatic operation (left side)
- (3) Left-side air distribution
- (4) MAX-DEF function (rapid defrosting/demisting)
- (5) Fan speed
- (6) Heated rear window
- (7) Right-side air distribution
- (8) **AUTO** Automatic operation (right side)
- (9) Right-side temperature
- (10) **SYNC** alignment of set temperatures (left-side/right-side)
- (11) Right heated seat (where provided)
- (12) **A/C** Climate control compressor on

- (13)  Heated steering wheel (where provided)
- (14)  Left heated seat (where provided)
- (15)  Internal air recirculation/automatic function selection

## DISPLAY

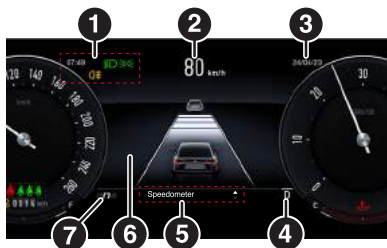

5

9550237

The following information can be shown on the instrument panel display, fig. 8:

- (1) Customisable notification area, main beam/dipped beam, side lights, rear fog lights icons, second instantaneous speed display ("Evolved" display only).
- (2) Instantaneous speed (numerical), driving assistance system notification icons
- (3) Customisable notification area, engine torque/External temperature display
- (4) Gear shift indicator (GSI)/Automatic transmission information
- (5) Menu title, screen navigation indications (e.g.: reset counters, customisation of information display, etc.)
- (6) Main screen with driving assistance system notifications/Car speed display
- (7) Operating mode display: Dynamic, Natural, Advanced Efficiency, Race (where provided)

## INSTRUMENT PANEL

### "HERITAGE" DISPLAY



6

9550238



7

9550239

## "EVOLVED" DISPLAY



8


9550412



9

9550413

## "RELAX" DISPLAY

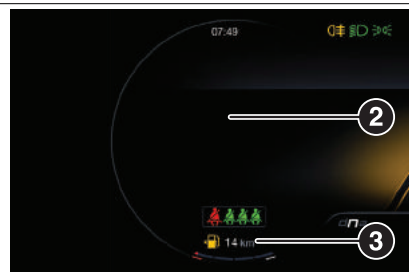

10


9550414



11


9550415

## "Race" DISPLAY (Quadrifoglio versions)

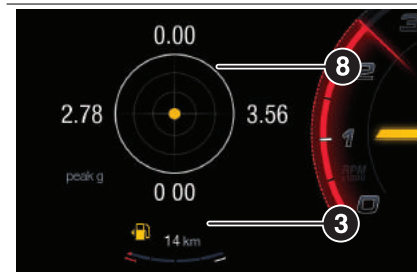

12

9550416

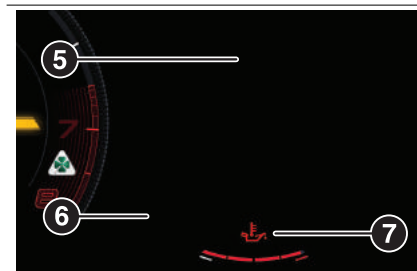

13

9550417

Information shown:

- (1) Speedometer (excluding "Relax" display)
- (2) Driving assistance system indications / Customisable notification area ("Relax" display only) / Instantaneous speed display ("Relax" display only)



(3) Digital fuel level gauge, SBA (Seat Belt Alert) system indications, TPMS (Tyre Pressure Monitoring System) notification icon

(4) Tachometer

(5) Customisable and notification area with pop-ups

(6) Notification icon display area

(7) Digital engine oil temperature indicator

(8) Longitudinal/lateral acceleration trend display, considering gravity acceleration as a reference unit. Lateral acceleration peaks are also displayed ("Race" display only)

## WARNING LIGHTS AND MESSAGES

**WARNING** The instrument panel warning lights/symbols are accompanied by a dedicated message and/or acoustic warning where applicable. These indications are indicative and precautionary and as such must not be considered as exhaustive and/or alternative to the information contained in the online Owner Handbook, which you are advised to read carefully in all cases. Always refer to the information in this section in the event of a failure indication.

**WARNING** Causes of ignition and actions to be taken are illustrated in detail in the online Owner Handbook. However, the following actions are briefly outlined in this Quick Guide:











(\*) Contact an Alfa Romeo Dealership










(\*\*) Repair immediately using the dedicated "Tirekit" kit and contact an Alfa Romeo Dealership

### INSTRUMENT PANEL DISPLAY FAILURE


All warning lights remain off in the event of an instrument panel display failure. In this case, contact an Alfa Romeo Dealership.











## RED WARNING LIGHTS/SYMBOLS


Warning Light/Symbol	Meaning
	AIRBAG FAILURE (*)
	INSUFFICIENT BRAKE FLUID (*)/ ELECTRIC PARKING BRAKE ON
 	EBD FAILURE (*)
	POWER STEERING FAILURE
	ALFA™ SYSTEM STEERING TORQUE (AST) FAILURE
	SEAT BELTS REMINDER
	ALTERNATOR FAILURE (*)
	DOORS OPEN
	COOLANT TEMPERATURE TOO HIGH (*)

Warning Light/Symbol	Meaning
	BONNET NOT PROPERLY SHUT
	LUGGAGE COMPARTMENT NOT PROPERLY SHUT
	LOW ENGINE OIL PRESSURE (*)
	LOW ENGINE OIL LEVEL/OIL OVER MAXIMUM LEVEL (*)
	ENGINE OIL TEMPERATURE TOO HIGH (*)
	AUTOMATIC TRANSMISSION FAILURE (*)
	DAA SYSTEM ACTIVATION
	SPEED LIMIT EXCEEDED
	BRAKE DISC TEMPERATURE

### AMBER WARNING LIGHTS/SYMBOLS

Warning Light/Symbol	Meaning
	ABS FAILURE (*)

Warning Light/Symbol	Meaning
	ELECTRIC PARKING BRAKE FAILURE (*)
	
	ESC SYSTEM INTERVENTION/ ESC SYSTEM FAILURE (*)/ HILL START ASSIST SYSTEM FAILURE (*)
	PARTIAL/TOTAL DEACTIVATION OF ACTIVE SAFETY SYSTEMS
	EOBD/INJECTION SYSTEM FAILURE (*)/ DAMAGED CATALYTIC CONVERTER
	AdBlue® (UREA) INJECTION SYSTEM FAILURE (Diesel versions) (*)
	TPMS SYSTEM FAILURE (**)/ TYRE PRESSURE LOW
	REAR FOG LIGHT
	GLOW PLUG PREHEATING/ GLOW PLUG PREHEATING FAILURE (*)
	FUEL CUT-OFF SYSTEM OPERATION











Warning Light/Symbol	Meaning
	LANE DEPARTURE WARNING (*)/LANE KEEPING ASSIST FAILURE (*)
	FUEL RESERVE/LIMITED RANGE
	LOW WINDSCREEN WASHER LEVEL
	WINDSCREEN WIPER FAILURE (*)
	ACTIVE CRUISE CONTROL SYSTEM FAILURE (*)
	PARK SENSORS SYSTEM FAILURE (*)
	FORWARD COLLISION WARNING (FCW) SYSTEM FAILURE (*)
	START&STOP EVO SYSTEM FAILURE (*)
	SPEED LIMITER FAILURE (*)
	DPF CLEANING IN PROGRESS/ GPF CLEANING IN PROGRESS/ GPF FAILURE (*)
	FORWARD COLLISION WARNING (FCW) SYSTEM OFF

Warning Light/Symbol	Meaning
	BLIND SPOT MONITORING SYSTEM FAILURE
	ENGINE IMMOBILIZER SYSTEM FAILURE (*)/BREAK-IN ATTEMPT/ALARM FAILURE (*)
	AdBlue® (UREA) LEVEL LOW
	WATER IN DIESEL FILTER (*)
	RAIN SENSOR FAILURE (*)
	BRAKE PAD WEAR (*)
	CARBO-CERAMIC BRAKE (CCB) DISC WEAR (*)
	KEYLESS START SYSTEM FAILURE (*)
	POSSIBLE ICE ON ROAD
	ENGINE OIL DEGRADED (*)
	FUEL CUT-OFF SYSTEM FAILURE (*)



Warning Light/Symbol	Meaning
	EXTERNAL LIGHT FAILURE (*)
	AUTOMATIC MAIN BEAM HEADLIGHTS FAILURE (AHB) (*)
	DUSK SENSOR FAILURE (*)
	FUEL LEVEL SENSOR FAILURE (*)
	ENGINE OIL LEVEL SENSOR FAILURE (*)
	GENERIC FAILURE (*)
	ABS ACTIVATION
	DYNAMIC TRACTION CONTROL SYSTEM FAILURE (*)
	ALL-WHEEL DRIVE FAILURE (*)
	TEMPORARY ALL-WHEEL DRIVE FAILURE (*)
	DAA SYSTEM FAILURE (*)
	HAS SYSTEM (*)/TJA SYSTEM FAILURE (*)

Warning Light/Symbol	Meaning
	SHOCK ABSORBERS (ADC) FAILURE (*)
	SOFT SUSPENSION CALIBRATION
	SUSPENSION CALIBRATION CHANGE
	TRANSMISSION FLUID OVERHEATING (*)
	ENGINE OIL PRESSURE SENSOR FAILURE (*)
	TRAILER LIGHT CONTROL MODULE FAILURE (*)
	FUEL TANK CAP NOT CLOSED
	AFS SYSTEM FAILURE (*)
	DIPPED BEAM AUTOMATIC ADJUSTMENT FAILURE





## GREEN WARNING LIGHTS/SYMBOLS

Warning Light/Symbol	Meaning
	SIDE LIGHTS AND DIPPED BEAM HEADLIGHTS
	FOG LIGHTS
	DIRECTION INDICATORS
	
	START & STOP EVO SYSTEM OPERATION
	AUTOMATIC DIPPED BEAM HEADLIGHTS
	DIPPED BEAM HEADLIGHTS
	CRUISE CONTROL ACTIVATION
	ACTIVE CRUISE CONTROL (ACC) ACTIVATION
	SPEED LIMITER ACTIVATION






## BLUE WARNING LIGHTS/SYMBOLS

Warning Light/Symbol	Meaning
	MAIN BEAM HEADLIGHTS ACTIVE
	AUTOMATIC MAIN BEAM HEADLIGHTS ACTIVE

## WHITE WARNING LIGHTS/SYMBOLS

Warning Light/Symbol	Meaning
	AUTOMATIC DIPPED BEAM HEADLIGHTS LIT
	AUTOMATIC DIM HIGH BEAMS LIT
	GEAR SHIFT INDICATOR (SINGLE GEAR SHIFT SUGGESTION)
	GEAR SHIFT INDICATOR (DOUBLE GEAR SHIFT SUGGESTION)

## LANE KEEPING ASSIST SYMBOLS

Symbol on the display	Meaning
	SENSOR NOT AVAILABLE
	SYSTEM ON
	SYSTEM ON (only one side line detected)
	CAR CLOSE TO SIDE LINE
	CROSSING SIDE LINE

## THE KEYS



1)


### ELECTRONIC KEY



#### ATTENTION

**1)** Do not swallow the battery. Danger of chemical burns. The keys contain a small battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and cause death. Keep new and used batteries out of the reach of children. If the battery compartment does not close securely, discontinue use of the product and keep it out of reach of children. If you believe that batteries may have been swallowed or inserted inside the body, seek medical attention immediately. The emergency key (where provided) must be immediately inserted into the electronic key to prevent easy access to the battery.

## IGNITION DEVICE



2) 3) 4)



14

0402650001EM

- STOP:** engine off, steering column locked.
- ON** (single button press): all electrical devices are available.
- AVV:** engine starting.



#### ATTENTION

- 2)** Always take the key with you when you leave your car to prevent someone from accidentally operating the controls. Remember to engage the electric parking brake. Never leave children unattended in the car.
- 3)** Before leaving the car, ALWAYS engage the electric parking brake. Activate mode P (Park) and press the ignition device to set it to STOP. When leaving the car, always lock all the doors by pressing the button on the handle.
- 4)** For versions equipped with the Keyless Start system, do not leave the electronic key inside or near the car or in a place accessible to children. Do not leave the car with the ignition device in ON position. A child could activate the electric window winders, other controls or even start the car.


## EXTERNAL LIGHTS



15

9550200

### DIPPED BEAM HEADLIGHTS

Turn the light switch (1) fig. 15 to  to switch on the side lights, the lights on the instrument panel and the dipped beam headlights.

The  warning light switches on in the instrument panel.

### DAYTIME RUNNING LIGHTS (DRL) (Daytime Running Lights) AND SIDE LIGHTS

(where provided)



5) 6)  
With the ignition device turned to ON and the light switch (1) fig. 15 turned to the **0** position, the daytime running lights, the rear light clusters and the number plate lights are automatically activated.

## REAR FOG LIGHT


Press the button (2) fig. 15 to switch the light on.


## PARKING LIGHTS

They are switched on if, within a few seconds from stopping the engine, the light switch (1) fig. 15 is taken first to the **0** position and then to position **p**.


The  warning light switches on in the instrument panel.

## MAIN BEAM HEADLIGHTS

To activate the fixed main beam headlights push the left lever towards the instrument panel fig. 16. The light switch must be turned to **AUTO** or .

With main beam headlights on, the warning light/icon  on the instrument panel will come on.

The main beam headlights are switched by pushing the left stalk forward again.

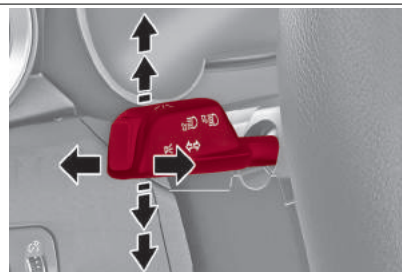



16



9550234

## DIRECTION INDICATORS

Move the left stalk fig. 16 to the end of its travel (unstable position):

 upwards: activates the right direction indicator;

 downwards: activates the left direction indicator.

Warning light  or  will blink on the instrument panel

### "Lane Change" function

When you want to signal the change of the driving lane, move the lever until the first impulse (about half stroke).

The direction indicator on the side selected will be activated for 3 flashes and then go out automatically.

## AUTO FUNCTION (Dusk sensor)

This function switches the headlights on/off automatically according to the environmental light.

With the ignition device ON, turn the light switch (1) to fig. 15 the AUTO position.




### ATTENTION

**5)** The daytime running lights are an alternative to the dipped headlights for driving during the daytime in countries where it is compulsory to have lights on during the day; where it is not compulsory, the use of daytime running lights is permitted.

**6)** Daytime running lights cannot replace dipped beam headlights when driving at night or through tunnels. The use of daytime running lights is governed by the highway code of the country in which you are driving. Comply with legal requirements.

## TPMS (Tyre Pressure Monitoring System)


(where provided)


 7) 8) 9) 10) 11)

 1)


The TPMS signals the driver a possible insufficient pressure if this falls below the warning limit for any reason, including the effects of low temperature and normal loss of pressure from the tyre.

The TPMS will stop indicating insufficient tyre pressure when it is equal to or greater than the prescribed cold inflation pressure.

If insufficient tyre pressure is indicated () symbol shown on the instrument panel), increase the inflation pressure up to the prescribed cold inflation value.

Once the system receives the updated inflation pressures, it will automatically update and the  symbol will turn off. The car might need to be driven at a speed higher than about 25 km/h up to 20 minutes for the TPMS to receive this information.

To view TPMS information on the Connect system display, and activate the "Car information" function, fig. 17 using the corresponding widget in the Main Menu.

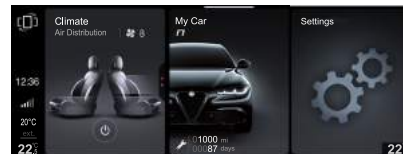


17

12126S2305EM

If the inflation pressure corresponds to the correct value, "OK" will appear on the display, otherwise "KO" will appear.

Press the graphic button (1) fig. 18 on the display of the Connect system to see the screen showing the inflation pressures of each tyre.

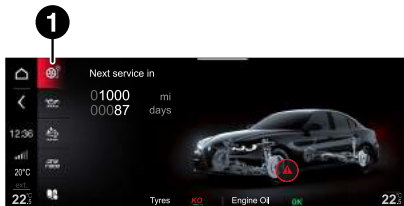

18

12126S2310EM



## ATTENTION

**7)** The presence of the TPMS does not permit the driver to neglect regular checks of the tyre pressure, including for the spare tyre, and correct maintenance: the system is not used to signalling a possible tyre fault.

**8)** Tyre pressure must be checked with tyres rested and cold. Should it become necessary for whatever reason to check pressure with warm tyres, do not reduce pressure even though it is higher than the prescribed value. Repeat the check when the tyres are cold.

**9)** Should one or more wheels be fitted without sensors, the system will no longer be available and a warning message will be shown on the display, until wheels with sensors are fitted again.

**10)** The TPMS cannot indicate sudden tyre pressure drops (e.g. if a tyre bursts). In this case, stop the car, braking with caution and avoiding abrupt steering.


**11)** Changes in external temperature may cause tyre pressures to vary. The system may temporarily indicate insufficient pressure. In this case, check the tyre pressure when cold and, if necessary, restore the inflation values.




## WARNING

**1)** The Tyre Repair Kit, provided with the car, is compatible with the TPMS sensors. Using sealants different from that in the original kit may compromise its operation. If sealants not equivalent with the original one are used, it is recommended to have the TPMS sensor operation checked by a qualified repair centre.

## AUTOMATIC TRANSMISSION

 12)13) 14) 15)

### GEAR LEVER

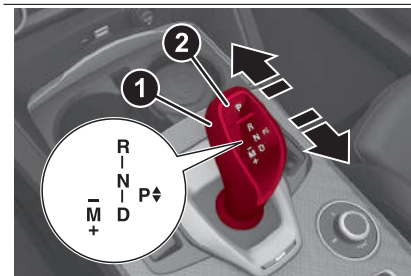

19

07076V0686EM

- P** = Park
- R** = Reverse
- N** = Neutral
- D** = Drive (automatic forward speed)
- AutoStick:**
  - + shifting up in sequential driving mode
  - - shift down in sequential driving mode

### LEVERS ON THE STEERING WHEEL

(where provided)

**Left shift paddle (-):** pull the left shift paddle towards the steering wheel and release it to shift down.



**Right shift paddle (+):** pull the right shift paddle towards the steering wheel and release it to shift up.

To engage N (Neutral), pull both levers simultaneously.

To activate D (Drive) mode, from N (Neutral), P (Parking) and R (Reverse) position: push the brake pedal and the right paddle (+).

**Deactivation:** To deactivate the sequential driving bring the gear lever back in position D (Drive) ("automatic" mode).



20

9550205



### ATTENTION

**12)** Never use position P (Park) instead of the electric parking brake. Always engage the electric parking brake when parking the car to avoid the accidental movement of the car.

**13)** If the P (Park) position is not engaged, the car could move and injure people. Before leaving the car, make sure that the gear lever is in position P and that the electric parking brake is engaged.

**14)** Do not shift the gear lever to N (Neutral) and do not stop the engine when driving on a downhill road. This type of driving is dangerous and reduces the possibility of intervening in the case of variation of the road traffic or surface. You risk losing control of your car and causing accidents.

**15)** NEVER leave children unattended inside the car, let alone leave the car with the doors unlocked in a place that children can access easily. Children may seriously, or even fatally, injure themselves. Also ensure that children do not inadvertently operate the electric parking brake, the brake pedal or the gear lever.


## "ALFA DNA™" SYSTEM



21

0402650997EM

By using the selector fig. 21 on the central tunnel, different response modes to be selected according to driving style and road conditions.

- d = Dynamic** (sports driving mode)
- n = Natural** (mode for driving in normal conditions)
- a = Advanced Efficiency** (driving mode for maximum fuel savings)
- RACE** (where provided) = track race driving mode
-  (where provided) = changes the suspension setting

## MANUAL SOS CALL

(for versions/markets where provided)


This is designed to provide support in the event of an accident and/or emergency (SOS) the function is activated:

- automatically in the event of a major collision recorded by the device aboard the car;
- manually, by pressing the SOS button located on the ceiling light fig. 22 or by means of the appropriate menu fig. 23 on the Connect system (for versions/markets, where provided).



22

0413650073EM

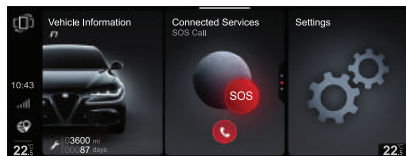

23

12126S2330EM

**WARNING** If the SOS emergency service is activated, the call will be routed automatically to a private call centre. We hereby specify that, whenever the SOS call is referred to the text, the SOS call is to be considered managed by private service providers. This SOS call service is not the e-call system.

If the system is unable to establish the voice call, or the line disconnects due to insufficient coverage, the SOS service will try to call the operational centre again for 5 minutes.

**Privacy:** GPS location is always active for SOS. Deactivating it via the menu items in the "Settings" menu of the Connect system will make some with other services unavailable (see the "Settings" chapter of the Connect system for more details).

**WARNING** The icon is shown at the bottom left of the Connect system display when the geolocation function is active (ON). When geolocation is on, the vehicle position is tracked to enable the functions that require it. When geolocation is off, the vehicle position is only tracked by the navigation, safety, insurance and driver assistance systems (where provided). See the Connect system "Settings" chapter to deactivate the function.


**WARNING** Malfunctions of the SOS call system are indicated when the engine is started, when the malfunction is detected and by a corresponding message on the Connect system display. Contact an Alfa Romeo Dealership as soon as possible.

**WARNING** Ignoring malfunction warnings displayed by the Connect system for a long time could lead to being unable to make an SOS call when needed.

## CHILD RESTRAINT SYSTEMS

For optimal protection in the event of an impact, all occupants must be seated and wearing adequate restraint systems, including newborn and other children! This prescription is compulsory in all EC countries according to EC Directive 2003/20/EC.

### PASSENGER'S FRONT AIRBAG AND CHILD RESTRAINT SYSTEMS

 16) 17) 18) 19) 20) 21) 22) 23) 24) 25) 26)

Rearward-facing child restraint systems must **NEVER** be fitted on the front seat with an active passenger side airbag since in the event of a collision the airbag activation may cause fatal injuries to the transported child.

**ALWAYS** comply with the instructions on the label stuck on the passenger side sun visor (A) or (B) fig. 24.



24

9550193



25

06106S0376EM

### DEACTIVATING/ACTIVATING THE PASSENGER SIDE AIRBAGS: FRONT AIR BAG AND SIDE BAG (where provided)

The ON and OFF status LEDs are on the front ceiling light, fig. 25.

The LEDs indicates the passenger airbag protection status:

- Passenger protection activated:** the ON LED switches on fixed
- Passenger protection deactivated:** the OFF LED turns on fixed



### ATTENTION

**16)** Incorrect fitting of the child restraint system may result in an inefficient protection system. In the event of an accident the child restraint system may become loose and the child may be injured, even fatally. When fitting a restraint system for newborns or children, strictly comply with the instructions provided by the Manufacturer.

**17)** When the child restraint system is not used, secure it with the seat belt or with the ISOFIX anchorages, or remove it from the car. Do not leave it unsecured inside the passenger compartment. In this way, in the event of sudden braking or an accident, it will not cause injuries to the occupants.

**18)** After installing a child restraint system, do not move the seat: always remove the child restraint system before making any adjustment.

**19)** Always make sure that the belt strap does not pass under the child's arms or behind its back. In the event of an accident the seat belt will not be able to secure the child, with the risk of injury, including fatal injury. Therefore the child must always wear the seat belt correctly.


**20)** Do not use the same lower anchoring to install more than one child restraint system.

**21)** If a Universal ISOFIX child restraint system is not fixed to all three anchorages, it will not be able to protect the child correctly. In the event of an accident, the child could be seriously or fatally injured.

**22)** Fit the child restraint system when the car is stationary. The child restraint system is correctly secured to the brackets when you hear the click. Follow the instructions for assembly, disassembly and positioning that the Manufacturer must supply with the child restraint system.

**23)** SEVERE DANGER When a front passenger airbag is fitted, do not install rearward facing child restraint systems on the front passenger seat. Deployment of the airbag in a crash could cause fatal injuries to the child regardless of the severity of the collision. It is advisable to always carry children in a child restraint system on the rear seat, which is the most protected position in the event of a collision.

**24)** On the sun visor there is a label with suitable symbols reminding the user that it is compulsory to deactivate the airbag if a rearward facing child restraint system is fitted. Always follow the instructions on the passenger-side sun visor.

**25)** Should it be necessary to carry a child on the passenger side front seat in a rear facing child restraint system, the passenger side front and side airbags must be deactivated through the main menu of the Connect system, verifying deactivation by checking that the  OFF LED on the front ceiling light is lit. Move the passenger's seat as far back as possible to avoid contact between the child seat and the dashboard.

**26)** Do not move the front or rear seat if a child is seated on it or on the dedicated child restraint system.

## REPLACING A BULB



2)



### WARNING

**2)** The number plate lights are of the LED-type. For bulb replacement, contact an Alfa Romeo Dealership.


## DRIVING TIPS


In daily use, the consumption of an electric car may depend on the following factors, which can have a considerable impact:

- car maintenance;
- tyre pressure;
- unnecessary loads;
- roof rack/ski rack;
- electric devices;
- climate control system use;
- devices for aerodynamic control.

## TYRE REPAIR KIT

(where provided)

 27) 28) 29) 30) 31) 32) 33) 34) 35) 36) 37) 38) 39)

 3) 4) 5)

 1)

The car may be equipped with a different Tyre Repair Kit (OPT1 kit or OPT2 kit), depending on the version.

## PRELIMINARY OPERATIONS


Proceed as follows:

- stop the car in a position that is not dangerous for oncoming traffic where you can change the wheel safely. The car must be stopped in a lay-by, car-park or parking or service area, and the ground must be as level as possible and sufficiently compact.
- stop the engine, turn on the hazard warning lights, engage the electric parking brake and set the gear lever to "P" (Park)
- steer the wheels completely
- if on a steep slope, place wedges or stones behind the wheels
- put on the reflective safety jacket before getting out of the car (if required by the regulations in force). In any case, follow the road safety laws in force in the country where you are travelling.
- make sure that any passengers get out of the car and go to a safe place where they will not obstruct traffic or be exposed to the risk of injury. In the event of a puncture, change the tyre in accordance with the laws of the country in which you are travelling

## OPT1 KIT DESCRIPTION

The Tyre Repair Kit consists of:

- a cartridge (1), fig. 26, containing sealant and fitted with: transparent tube (2) for injecting the sealant and sticker (3) with the wording MAX 80 km/h/ 50 mph to be placed in a clearly visible position (e.g. on the dashboard) after repairing the tyre;
- one compressor (4) complete with pressure gauges and connectors;
- an instruction leaflet, to refer to for prompt and correct use of the Tyre Repair Kit and that must be then given to the personnel dealing with the tyre treated with sealant;
- a pair of protective gloves;
- some adaptors, for inflating different elements.

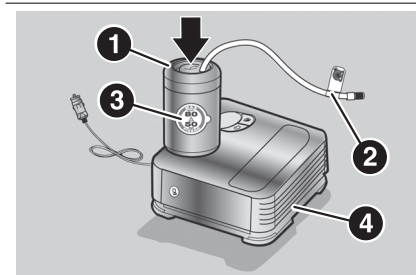


26

0806650002EM

## Repair procedure

Proceed as follows:


- ❑ insert the sealant cartridge (1), fig. 26, into the corresponding compartment in the compressor (4) and press it down hard. Remove the speed limit sticker (3) and apply it in a clearly visible position
- ❑ wear the gloves
- ❑ remove the cap from the tyre valve and screw the transparent tube for the sealing fluid (2), fig. 26, onto the valve. If a 250 ml cartridge is present the housing of the transparent tube is provided with a removable ring to facilitate extraction
- ❑ make sure that the ON-OFF button (5), fig. 27, is in the off position (button not pressed)

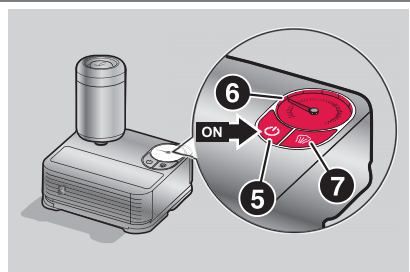

27

08066S0005EM

- ❑ insert the electrical connector in the 12 V power socket of the car and start the engine
- ❑ operate the compressor by pressing the ON/OFF button (5) fig. 27. When the pressure gauge (G) displays the pressure specified in the “Wheels” chapter in this publication, in the “Technical specifications” section of the “Wheels” chapter of the online Owner Handbook or on the specific label, switch off the compressor by pressing the ON-OFF button again
- ❑ disconnect the cartridge (8), fig. 28, from the compressor by pressing the release button (9), fig. 28, and lifting the cartridge upwards

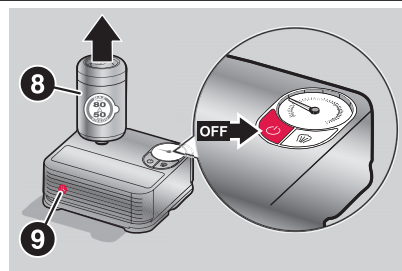

28

08066S0543EM


If the pressure gauge (6), fig. 27, indicates a pressure lower than 1.8 bar (26 psi) 15 minutes after starting the compressor, switch off the compressor, disconnect the sealant tube (2), fig. 26, from the tyre valve and remove the cartridge (1) from the compressor.

Move the car by approximately 10 metres to distribute the sealant inside the tyre.

Stop safely, switch on the hazard warning lights, set the gear lever to P, leave the wheels fully steered and then stop the engine. When parked on a steep slope, place a wedge or stone behind the wheels.

Restore pressure to the prescribed value using the black inflation tube (10), fig. 29.

If also in this case the pressure is lower than 1.8 bar (26 psi) 15 minutes after switching on the compressor, do not resume driving and contact an Alfa Romeo Dealership.

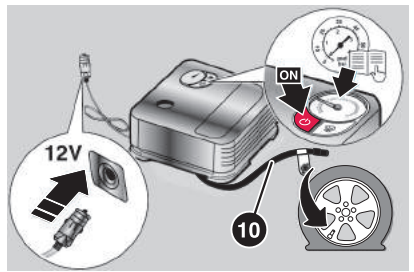

29

08066S0544EM

If the pressure indicated is higher than 1.8 bar (26 psi), restore the pressure and drive safely to an Alfa Romeo Dealership as soon as possible. If the pressure is lower than 1.8 bar (26 psi), do not resume driving but contact an Alfa Romeo Dealership.


### Inflation procedure

Proceed as follows:

- stop the car safely, as described above, and engage the electric parking brake
- take out the black inflation tube (10), fig. 29, and screw it firmly onto the tyre valve

Press the air release button (7), fig. 27, to adjust any tyre overpressure.


### OPT2 KIT DESCRIPTION

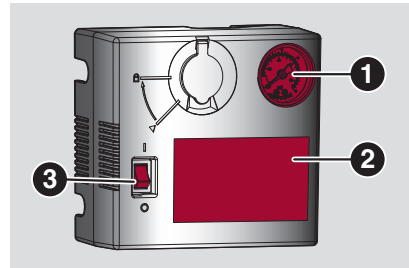

30

9550445


- (1) fig. 30 Pressure gauge
- (2) Instruction label
- (3) ON/OFF switch

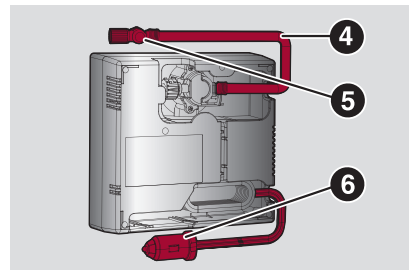

31

9550446

- (4) fig. 31 Air tube
- (5) Deflation button
- (6) 12V power supply cable/ plug

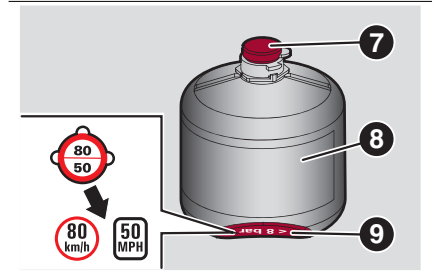


32

9550447

- (7) fig. 32 Cap for the sealant bottle
- (8) Sealant bottle and expiry date
- (9) Speed label

### Description

The kit is composed of a compressor (1), fig. 33, a cartridge (2) containing the sealant and an adhesive label (3) with the wording "Max 80 km/h", to be applied in a visible position (e.g. dashboard) after repairing the tyre.

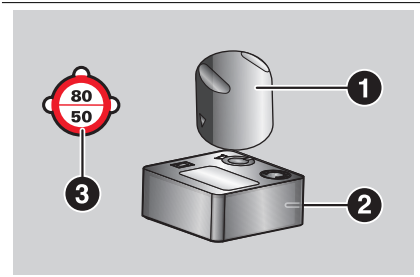


33

9550448

### Repair procedure

Proceed as follows:


- take the kit, detach the speed limit sticker and apply it in a clearly visible position, e.g. on the steering wheel;
- open the cap on the compressor, engage the cartridge and turn it one quarter turn clockwise, fig. 34;
- remove the cap from the tyre valve and screw the black compressor tube onto the valve;
- make sure that the ON-OFF switch is in the off position (switch in the 0 position);

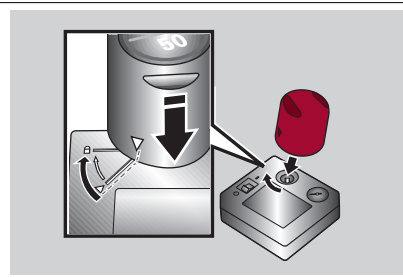

34

9550450

- plug the electrical connector into the 12V socket in the car, fig. 35, and then start the engine;
- ensure that the ON/OFF switch is in the "0" (off) position;
- plug the electrical connector, fig. 35, into the 12V socket in the car and then start the engine;

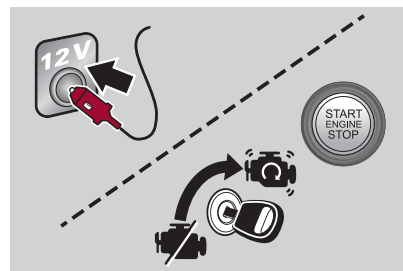


35

9550451

- move the ON/OFF switch fig. 36 to the "I" (on) position to start the compressor;

- when the pressure gauge displays the prescribed pressure specified in the "Wheels" chapter in this publication, in the "Technical specifications" section of the "Wheels" chapter of the online Owner Handbook or on the specific label, turn off the compressor by moving the button to the OFF position (0)

If the pressure gauge indicates a pressure lower than 2.0 bar/ 29 psi within 10 minutes of starting the compressor, turn off the compressor, disconnect the black compressor tube from the tyre valve, unscrew the cartridge from the compressor by turning it a quarter turn anticlockwise and lift it out. Move the car by approximately 10 metres to allow the distribution of the sealant.

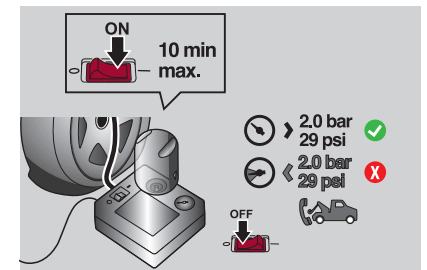

36


9550452



Stop safely, switch on the hazard warning lights, set the gear lever to P, leave the wheels fully steered and then stop the engine. If on a steep slope, place a wedges or stones behind the wheels and restore the prescribed pressure using the black compressor tube.

If also in this case the pressure is lower than 2.0 bar/ 29 psi 10 minutes after turning on, do not resume driving and contact an Alfa Romeo Dealership.

After driving for about 8 km/ 5 miles, fig. 37, stop safely, switch on the hazard warning lights, set the gear lever to P, leave the wheels fully steered and then stop the engine. When parked on a steep slope, place a wedge or stone behind the wheels.

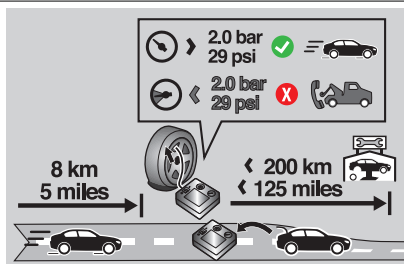


37

9550454

Take the compressor and restore the pressure using the black inflation tube. If the pressure shown is higher than 2.0 bar / 29 psi, restore the pressure and drive safely to an Alfa Romeo Dealership as soon as possible. If the pressure is lower than 2.0 bar/ 29 psi, do not resume driving but contact an Alfa Romeo Dealership.

### Pressure relief valve

If the tyre pressure is higher than expected, after switching off the compressor, it can be lowered by means of the button, fig. 38, located next to the black tube connection.

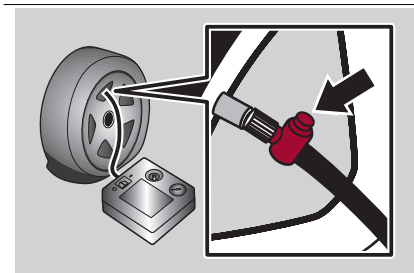

38

9550455



### ATTENTION

**27) ATTENTION:** Do not exceed 50 mph (80 km/h). Avoid sudden acceleration or braking. The Tire Repair Kit provides a temporary repair, so the tyre must be examined and repaired by a specialist as soon as possible. Before using the Tire Repair Kit, ensure that the tyre is not damaged excessively and that the rim is in good condition, otherwise do not use it and call roadside assistance. Do not remove foreign bodies from the tyre.

**28)** Punctures on the sides of the tyre may not be repaired. Do not use the Tyre Repair kit if the tyre was damaged as a result of being used when underinflated.

**29)** Wear the protective gloves provided with the Tyre Repair kit.

**30)** Apply the sticker where it can be easily seen by the driver as a reminder that the tyre has been treated with the Tyre Repair Kit. Drive carefully, particularly on bends.

**31)** Repairs are not possible in the case of damage to the wheel rim (bad groove distortion causing air loss). Do not remove foreign bodies (screws or nails) from the tyre.

**32)** As required by current regulations, the information on chemical substances for the protection of human health and the environment and on the safe use of the sealing fluid are on the packaging label. Compliance with the indications on the label is an essential condition to ensure the safety and the effectiveness of the product. Remember to carefully read the label before use; the user of the product is responsible for any damages caused by improper use. The sealing fluid has an expiry date. Replace the bottle if the sealant has expired.

**33)** Carefully read the cartridge label before use and avoid improper use. The kit should be used by adults and cannot be used by children.

**34)** The Tyre Repair Kit is not suitable for definitive repairs, so the repaired tyres may only be used temporarily. The Tirekit provides a temporary repair, therefore the tyre must be examined and repaired by a specialist as soon as possible.

**35)** Do not let the compressor turned on for longer than 10 consecutive minutes - overheating hazard.

**36)** If the pressure falls below 26 psi (1.8 bar), do not drive any further: the Tyre Repair Kit cannot guarantee proper seal because the tyre is too damaged. Contact an Alfa Romeo Dealership.

**37)** You must always indicate that the tyre was repaired using the Tyre Repair Kit. Give the booklet to the technicians who will be handling the tyre that was treated using the Tyre Repair Kit.

**38)** Only use the Tyre Repair Kit when the tyre is punctured.

**39)** Indicate the presence of the stationary car in accordance with current regulations: hazard warning lights, warning triangle, etc. Those on board should get out of the vehicle and wait for the wheel to be repaired away from the threat posed by the traffic. On hills or uneven roads, use chocks or appropriate objects to block the wheels of the car.



## WARNING

**3)** The surface of the tube may be hot.

**4)** The sealant fluid is effective at external temperatures between -40°F and +122°F (-40°C and +50°C). The sealing fluid has an expiry date and must be replaced periodically.

**5)** In the event of a puncture caused by foreign bodies, the kit may be used to repair tyres showing damage on the tyre tread up to max. 6 mm diameter.



## WARNING

**1)** Dispose of the bottle and the sealant liquid properly. Have them disposed of in compliance with national and local regulations.

## FUSES

 40) 41)

 6)



### ATTENTION

**40) Replacement of a fuse.** Any service must be carried out exclusively by the Alfa Romeo Dealership or by a qualified repairer. The replacement of a fuse by a third party may cause a serious car fault.

**41) Installation of electrical accessories.** The vehicle's electrical circuit is designed to operate with standard or optional equipment, before installing other electrical equipment or accessories on the vehicle, contact the Alfa Romeo Dealership or a qualified repairer.



### WARNING

**6)** FCA declines all responsibility for expenses arising from the repair of the vehicle or for anomalies resulting from the installation of accessories not supplied or not recommended by Alfa Romeo and not installed according to specifications, in particular when the combined consumption of all the additional equipment connected exceeds 10 mA.

## SCHEDULED SERVICING

### SERVICE SCHEDULE (2.9 V6 engine)

WARNING Once you have carried out the last intervention in the table, continue with the scheduled servicing, maintaining the frequency indicated in the plan by marking each operation with a dot or dedicated note. Attention: simply restarting the maintenance from the start of the plan may cause the allowed interval to be exceeded for some operations!

Thousands of miles	9	18	27	36	45	54	63	72	81	90
Thousands of kilometres	15	30	45	60	75	90	105	120	135	150
Years	1	2	3	4	5	6	7	8	9	10
Check battery state of charge with the proper instrument	•	•	•	•	•	•	•	•	•	•
Check tyre condition/wear and adjust pressure. Check Tyre Kit recharge (where provided) conditions/expiry date	•	•	•	•	•	•	•	•	•	•
Check operation of lighting system (headlights, direction indicators, hazard warning lights, boot, passenger compartment, glove compartment, instrument panel warning lights, etc.)	•	•	•	•	•	•	•	•	•	•
Check and, if necessary, top up fluid levels (1)	•	•	•	•	•	•	•	•	•	•
Check exhaust emissions/smokiness	•	•	•	•	•	•	•	•	•	•
Check the supply/engine control and emissions systems operation using the diagnosis equipment	•	•	•	•	•	•	•	•	•	•
Visually inspect condition of: exterior bodywork, underbody protection, pipes and hoses (exhaust, fuel system, brakes), rubber elements (gaiters, sleeves, bushes, etc.)		•		•		•		•		•
Check windscreen wiper blade position/wear	•		•		•		•		•	
Check operation of the windscreen wiper/washer system and adjust nozzles, if necessary	•		•		•		•		•	
Check cleanliness of bonnet and boot locks, cleanliness and lubrication of linkage		•		•		•		•		•
Visually inspect conditions and wear of front disc brake pads and operation of pad wear indicators	•	•	•	•	•	•	•	•	•	•
Visually inspect conditions and wear of rear disc brake pads and operation of pad wear indicators	•	•	•	•	•	•	•	•	•	•

Thousands of miles	9	18	27	36	45	54	63	72	81	90
Thousands of kilometres	15	30	45	60	75	90	105	120	135	150
Years	1	2	3	4	5	6	7	8	9	10
Visually inspect the condition and tensioning of the accessory drive belt(s) (2)		●				●				●
Visually inspect the surface and edge of the carbon-ceramic brake discs	●	●	●	●	●	●	●	●	●	●
Replace engine oil and replace oil filter	●	●	●	●	●	●	●	●	●	●
Spark plug replacement (3)				●				●		
Replace accessory drive belt/s	(2)									
Replace brake pads/carbon-ceramic brake discs	(7)									
Replace air cleaner cartridge (4)		●		●		●		●		●
Replace the brake fluid	(5)									
Replace passenger compartment filter (4)	○	●	○	●	○	●	○	●	○	●
Alfa Connect Box system battery replacement (where provided) (6)					●					●

- (1) Always only use the liquids shown in the handbook for topping up after having checked that the system is not damaged.
- (2) The maximum mileage is 60,000 km. The belt must be replaced every 4 years, regardless of distance travelled. If the car is used in heavy conditions (dusty areas, particularly harsh weather conditions, very low or very high temperatures for extended periods, urban driving, long periods of idling), the maximum mileage is 30,000 km. The belt must be replaced every 2 years regardless of the mileage.
- (3) The replacement must be performed according to mileage and regards of the elapsed time. The following are vital in order to ensure correct operation and prevent serious damage to the engine: - only use spark plugs of the same type and brand specifically certified for the engine (see the "Engine" chapter in the "Technical Specifications" section of the online Owner Handbook); - strictly comply with the spark plug replacement frequency in the Service Schedule. It is advisable to contact a reference Dealership for plug replacement.
- (4) If the vehicle is used in dusty areas, the cleaner should be replaced every 15,000 km.
- (5) The brake fluid replacement has to be done every two years, irrespective of the mileage.
- (6) The battery in the Alfa Connect Box system must be replaced every 5 years, regardless of the mileage.
- (7) The actual interval for changing the brake pads and the carbon ceramic brake discs depends on the vehicle usage conditions and is signalled by the warning light or message on the instrument panel. Use the diagnosis equipment to reset the warning light every time the discs are replaced.

- Mandatory operations
- Recommended operations

## SERVICE SCHEDULE (2.0 T4 MAir engine)

WARNING Once you have carried out the last intervention in the table, continue with the scheduled servicing, maintaining the frequency indicated in the plan by marking each operation with a dot or dedicated note. Attention: simply restarting the maintenance from the start of the plan may cause the allowed interval to be exceeded for some operations!

Thousands of miles	9	18	27	36	45	54	63	72	81	90
Thousands of kilometres	15	30	45	60	75	90	105	120	135	150
Years	1	2	3	4	5	6	7	8	9	10
Check battery state of charge with the proper instrument	•	•	•	•	•	•	•	•	•	•
Check tyre condition/wear and adjust pressure, if necessary. Check quick tyre repair kit recharge conditions/expiry date (where provided)	•	•	•	•	•	•	•	•	•	•
Check operation of lighting system (headlights, direction indicators, hazard warning lights, boot, passenger compartment, glove compartment, instrument panel warning lights, etc.)	•	•	•	•	•	•	•	•	•	•
Check and, if necessary, top up fluid levels (1)	•	•	•	•	•	•	•	•	•	•
Check exhaust emissions/smokiness	•	•	•	•	•	•	•	•	•	•
Check the supply/engine control and emissions systems operation using the diagnosis equipment	•	•	•	•	•	•	•	•	•	•
Check engine oil deterioration using the diagnosis equipment (2)	•	•	•	•	•	•	•	•	•	•
Visually inspect condition of: exterior bodywork, underbody protection, pipes and hoses (exhaust, fuel system, brakes), rubber elements (gaiters, sleeves, bushes, etc.)		•		•		•		•		•
Check windscreen wiper blade position/wear	•		•		•		•		•	
Check operation of the windscreen wiper/washer system and adjust nozzles, if necessary	•		•		•		•		•	
Check cleanliness of bonnet and boot locks, cleanliness and lubrication of linkage		•		•		•		•		•
Visually inspect conditions and wear of front disc brake pads and operation of pad wear indicators	•	•	•	•	•	•	•	•	•	•
Visually inspect conditions and wear of rear disc brake pads and operation of pad wear indicators	•	•	•	•	•	•	•	•	•	•
Visually inspect the condition and tensioning of the accessory drive belt(s) (3)		•				•				•

Thousands of miles	9	18	27	36	45	54	63	72	81	90
Thousands of kilometres	15	30	45	60	75	90	105	120	135	150
Years	1	2	3	4	5	6	7	8	9	10
Replace engine oil and replace oil filter	(4)									
Replace Transfer Case oil (for AWD versions)								●		
Spark plug replacement(5)				●				●		
Replace accessory drive belt/s	(3)									
Replace air cleaner cartridge (6)			●			●			●	
Replace the brake fluid	(7)									
Replace passenger compartment filter (6)	○	●	○	●	○	●	○	●	○	●
Alfa Connect Box system battery replacement (where provided) (8)					●					●

- (1) Always only use the liquids shown in the handbook for topping up after having checked that the system is not damaged.
  - (2) If the engine oil quality detected by the vehicle diagnostics is lower than 20%, it is advisable to replace the engine oil and engine filter in order to avoid another service operation after a short time.
  - (3) The maximum mileage is 60,000 km. The belt must be replaced every 4 years, regardless of distance travelled. If the car is used in heavy conditions (dusty areas, particularly harsh weather conditions, very low or very high temperatures for extended periods, urban driving, long periods of idling), the maximum mileage is 30,000 km. The belt must be replaced every 2 years regardless of the mileage.
  - (4) The actual interval for changing engine oil and replacing the engine oil filter depends on the vehicle usage conditions and is signalled by the warning light or message in the instrument panel. In any cases, never exceed 1 year.
  - (5) The replacement must be performed according to mileage and regards of the elapsed time. The following are vital in order to ensure correct operation and prevent serious damage to the engine: - only use spark plugs of the same type and brand specifically certified for the engine (see the "Engine" chapter in the "Technical Specifications" section of the online Owner Handbook); - strictly comply with the spark plug replacement frequency in the Service Schedule. It is advisable to contact a reference Dealership for plug replacement.
  - (6) If the vehicle is used in dusty areas, the cleaner should be replaced every 15,000 km.
  - (7) The brake fluid replacement has to be done every two years, irrespective of the mileage.
  - (8) The battery in the Alfa Connect Box system must be replaced every 5 years, regardless of the mileage.
- Recommended operations  
● Mandatory operations

## SERVICE SCHEDULE (2.2 JTD engine)

WARNING Once you have carried out the last intervention in the table, continue with the scheduled servicing, maintaining the frequency indicated in the plan by marking each operation with a dot or dedicated note. Attention: simply restarting the maintenance from the start of the plan may cause the allowed interval to be exceeded for some operations!

Thousands of miles	12	24	36	48	60	72	84	96	108	120
Thousands of kilometres	20	40	60	80	100	120	140	160	180	200
Years	1	2	3	4	5	6	7	8	9	10
Check battery state of charge with the proper instrument	•	•	•	•	•	•	•	•	•	•
Check tyre condition/wear and adjust pressure, if necessary. Check quick tyre repair kit recharge conditions/expiry date (where provided)	•	•	•	•	•	•	•	•	•	•
Check operation of lighting system (headlights, direction indicators, hazard warning lights, boot, passenger compartment, glove compartment, instrument panel warning lights, etc.)	•	•	•	•	•	•	•	•	•	•
Check and, if necessary, top up the fluid levels in the engine compartment (engine coolant, brakes, windscreen washer, battery, etc.) (1)	•	•	•	•	•	•	•	•	•	•
Check exhaust emissions/smokiness	•	•	•	•	•	•	•	•	•	•
Use the diagnosis socket to check supply/engine management systems operation, emissions and, for versions/markets, where provided, engine oil degradation (2)	•	•	•	•	•	•	•	•	•	•
Visually inspect condition of: exterior bodywork, underbody protection, pipes and hoses (exhaust, fuel system, brakes), rubber elements (gaiters, sleeves, bushes, etc.)	•		•		•		•		•	
Check windscreen wiper blade position/wear	•		•		•		•		•	
Check operation of the windscreen wiper/washer system and adjust nozzles, if necessary	•		•		•		•		•	
Check cleanliness of bonnet and boot locks, cleanliness and lubrication of linkage		•		•		•		•		•
Visually inspect conditions and wear of front disc brake pads and operation of pad wear indicators	•	•	•	•	•	•	•	•	•	•
Visually inspect conditions and wear of rear disc brake pads and operation of pad wear indicators	•	•	•	•	•	•	•	•	•	•
Visually inspect the condition and tensioning of the accessory drive belt(s) (3)			•					•		



Thousands of miles	12	24	36	48	60	72	84	96	108	120
Thousands of kilometres	20	40	60	80	100	120	140	160	180	200
Years	1	2	3	4	5	6	7	8	9	10
Visually inspect the toothed timing drive belt (3)			●					●		
Check engine air cleaner	●	●	●	●	●	●	●	●	●	●
Replace engine oil and replace oil filter	(4)									
Replace Transfer Case oil (for AWD versions)						●				
Replace accessory drive belt/s	(3)									
Replace toothed timing drive belt	(3)									
Replace air cleaner cartridge (5)			●			●			●	
Replace fuel filter cartridge (6)			●			●			●	
Replace the brake fluid	(7)									
Replace the passenger compartment filter	○	●	○	●	○	●	○	●	○	●
Alfa Connect Box system battery replacement (where provided) (8)					●					●

- (1) Always only use the liquids shown in the handbook for topping up after having checked that the system is not damaged.
- (2) If the engine oil quality detected by the vehicle diagnostics is lower than 20%, it is advisable to replace the engine oil and engine filter in order to avoid another service operation after a short time.
- (3) The maximum mileage is 120,000 km. The belt must be replaced every 5 years, regardless of distance travelled. If the car is used in heavy conditions (dusty areas, particularly harsh weather conditions, very low or very high temperatures for extended periods, urban driving, long periods of idling), the maximum mileage is 60,000 km. The belt must be replaced every 4 years regardless of the mileage.
- (4) The actual interval for changing engine oil and replacing the engine oil filter depends on the vehicle usage conditions and is signalled by the warning light or message in the instrument panel. In any case, it must never exceed 2 years. Where the car is used mostly in urban settings you need to replace the engine oil filter every year.
- (5) If the vehicle is used in dusty areas, the cleaner should be replaced every 20,000 km.
- (6) If the car runs on fuel with quality below the relevant European specification, this filter must be replaced every 20,000 km.
- (7) The brake fluid replacement has to be done every two years, irrespective of the mileage.
- (8) The battery in the Alfa Connect Box system must be replaced every 5 years, regardless of the mileage.

- Recommended operations
- Mandatory operations

## REFILLING

	2.9 V6	2.0 T4 MAir	2.2 JTD	Prescribed fuels and original lubricants
Fuel tank [UK gal/litres]	12.76 (58)	12.76 (58)	11.4 (52)	Unleaded petrol (EN228 specifications) (2.9 V6/2.0 T4 MAir) / Automotive diesel fuel (EN590 and EN16734 specifications) (2.2 JTD)
including a reserve of [UK gal/litres]	1.98 (9.0)	1.98 (9.0)	1.76 (8.0)	
AdBlue® reservoir (where provided) capacity approximately [UK gal/litres]	N/A	N/A	3.5 (16.1)	AdBlue® (DIN 70 070 and ISO 22241-1 specifications)
Main cooling system [UK gal/litres]	2.46 (11.2)	1.89 (8.6)	1.92 (8.75) (***) / 1.96 (8.9) (****)	50% mixture of distilled water and PARAFLU <sup>UP</sup> (*)
Secondary cooling system [UK gal/litres]	1.21 (5.5)	0.95 (4.3)	1.16 (5.3) (****)	
Engine oil filter [UK gal/litres]	-	0.08 (0.4)	0.11 (0.5)	SELENIA QUADRIFOGLIO (2.9 V6) / SELENIA DIGITEK P.E. (2.0 T4 MAir) / SELENIA W.R. FORWARD 0W-20 (2.2 JTD)
Engine oil sump [UK gal/litres]	-	1.01 (4.6)	0.68 (3.1) (RWD) / 0.85 (3.9) (AWD)	
Engine oil sump and filter [UK gal/litres]	1.42 (6.5)	-	-	
Hydraulic brake circuit [UK gal/litres]	0.2 (0.9)	0.2 (0.9)	0.2 (0.9)	TUTELA BRAKE FLUID TOP EVO
Windscreen washer fluid reservoir [UK gal/litres]	0.92 (4.2)	0.92 (4.2)	0.92 (4.2)	PETRONAS DURANCE SC 35
Automatic transmission [UK gal/litres]	2.01 (9.11)	2.07 (9.4) (RWD) / 2.06 (9.3) (AWD)	2.02 (9.2) (***) / 2.0 (9.1) (****)	TUTELA TRANSMISSION AS 8
RDU 230-LSD differential [UK gal/litres]	0.25 (1.1)	0.2 (0.9)	0.2 (0.9)	TUTELA TRANSMISSION LS AXLE FLUID
RDU 210-eLSD differential (where provided) [UK gal/litres]	N/A	0.31 (1.4)	0.31 (1.4)	
RDU 210/215-LSD differential [UK gal/litres]	N/A	0.24 (1.1)	0.24 (1.1)	

	2.9 V6	2.0 T4 MAir	2.2 JTD	Prescribed fuels and original lubricants
AWD System FAD transfer case [UK gal/ litres]	N/A	0.11 (0.5)	0.11 (0.5)	TUTELA TRANSMISSION HYPOIDE GEAR OIL
AWD System TRANSFER CASE [UK gal/ litres]	N/A	0.15 (0.7)	0.15 (0.7)	TUTELA TRANSMISSION TRANSFER CASE

(\*) When the vehicle is used in particularly harsh weather conditions, we recommend using a 60% mixture of PARAFLU<sup>UP</sup> and 40% demineralised water.

(\*\*) 160 HP RWD version

(\*\*\*) 210 HP AWD version

N/A = Not applicable



7) 8)



### WARNING

**7)** Only use AdBlue® (UREA) compliant with DIN 70 070 and ISO 22241-1. Other fluids may cause damage to the system: also exhaust emissions would no longer comply with the law.

**8)** The distribution companies are responsible for the compliance of their product. Observe the precautions of storage and servicing, in order to preserve the initial qualities. The manufacturer will not recognise any guarantee in case of malfunctions and damage caused to the car due to the use of AdBlue® (UREA) not in accordance with regulations.

## WHEELS

### COLD TYRE INFLATION PRESSURES (psi/bar)

When the tyres are warm, the inflation pressure should be + 4.35 psi (+0.3 bar) in relation to the recommended figure. However, recheck the correct value when the tyre is cold.

The pressures given apply to all tyre types: summer, winter and all season (where provided).

#### 2.9 V6

245/35 ZR19 93Y XL (front axle): 34.8 / 2.4 (unladen/medium load) / 42.2 / 2.9 (full load)

285/30 ZR19 98Y XL (rear axle): 31.9 / 2.2 (unladen/medium load) / 42.2 / 2.9 (full load)

265 / 35 R19 (rear axle) (\*): 31.9 / 2.2 (unladen/medium load) / 42.2 / 2.9 (full load)

(\*) Recommended tyre if snow chains need to be fitted.

#### 2.0 T4 MAir / 2.2 JTD

225/55 R16 95W (incompatible with oversized brake system):

☐ 31.9 / 2.2 (front axle) / 34.8 / 2.4 (rear axle) (\*)

☐ 39.2 / 2.7 (front axle) / 43.5 / 3.0 (rear axle) (\*\*)

225/50 R17 98Y XL or 94W:

☐ 31.9 / 2.2 (front axle) / 34.8 / 2.4 (rear axle) (\*)

☐ 39.2 / 2.7 (front axle) / 43.5 / 3.0 (rear axle) (\*\*)

225/45 R18 91Y or 91W / 95V (All Season Tyres, where available):

☐ 31.9 / 2.2 (front axle) / 34.8 / 2.4 (rear axle) (\*)

☐ 39.2 / 2.7 (front axle) / 43.5 / 3.0 (rear axle) (\*\*)

255/40 R18 95Y (rear axle): 31.9 / 2.2 (\*) / 37.7 / 2.6 (\*\*)

225/40 R19 89W or 89Y or 93Y:

☐ 34.8 / 2.4 (front axle) / 37.7 / 2.6 (rear axle) (\*)

or

☐ 39.2 / 2.7 (front axle) / 43.5 / 3.0 (rear axle) (\*\*)

225/40 R19 89W or 89Y or 93Y (front axle): 34.8 / 2.4 (\*) / 39.2 / 2.7 (\*\*)

255/35 R19 92W or 92Y or 96Y (rear axle): 33.4 / 2.3 (\*) / 42.2 / 2.9 (\*\*)


(\*) Unladen/medium load inflation pressures

(\*\*) Full load inflation pressure

## CONNECT

### CONTROLS ON TUNNEL

On the central tunnel, fig. 39, there are commands to interact with the Connect system.

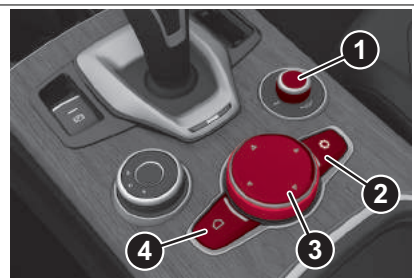

39

12126S0900EM

- 1: ON/OFF and VOLUME command
- 2: SETTINGS menu activation button
- 3: Rotary Pad
- 4: MENU selection button

## WIDGETS


To open the widget, select it using the touchscreen function and then press the widget, or turn the Rotary Pad and then press the widget.

### Using the touchscreen function

Select the desired widget or press the "Reorder"  button on the vertical status bar and then:

- press and hold for a few seconds on the desired widget and move it on the display to the left or right
- press on the resize icon of the desired widget
- select the desired widget and then scroll vertically.

### Using the controls located on the central tunnel

- press the "Settings"  button on the central tunnel
- turn the Rotary Pad to select the "Settings", fig. 40
- press the Rotary Pad to confirm the selection and then select one of the following items: "Reorder widget"/"Resize widget"/"Widget content"
- select desired item



40

12126S0906EM

## Viewing widget contents

- ❑ Turn the Rotary Pad to select the desired widget and then press the Rotary Pad to confirm the selection
- ❑ turn the Rotary Pad to display the contents of the widget and then press the Rotary Pad to keep the display active and exit the widget

## RADIO (TUNER) MODE

**SRC:** select to select the required frequency band

★ to select the Favourites list

☰ to view the list of available radio stations

📶 to manually seek a radio station



41

12126S0926EM

## MEDIA MODE


Press the graphic button to activate "MEDIA" mode SRC: the display shows the available sources: AM, FM, DAB, **Bluetooth**®, USB1, USB2.

**SRC:** activate the list of sources

↔ to activate Shuffle/Playback Mode

📁 to activate Tracks Library

📀 to activate the Playlists

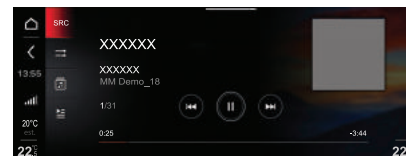



42

12126S0937EM

## PHONE MODE

### Pairing a mobile phone

Proceed as follows:


- activate the **Bluetooth**® function on the device
- in the main menu that can be activated by pressing button  on the central tunnel, select the "Settings" function
- select "Infotainment"
- select "Phone" and then "Bluetooth Settings"
- select the **Bluetooth**® device
- select "Add Device" 
- search for the Connect system on the **Bluetooth**® audio device
- select the device to be paired
- when requested by the audio device, enter the PIN code shown on the system display or confirm on the device the PIN displayed
- if the pairing procedure is completed successfully, a dedicated screen will appear.


The **Bluetooth**® function can also be activate by pressing the "OPTIONS" button in the "PHONE" or "MEDIA functions" which can be selected on the main menu.

## NAVIGATION MODE

(where provided)

### Setting a destination

To set a new destination, select the graphic button  (using the "touchscreen" function or by rotating the Rotary Pad): the graphic keyboard for entering the destination address will appear on the display and the list of "Destinations" will appear on the right side.

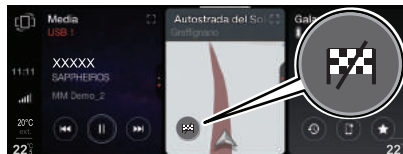

43


12126S2010EM

## SETTINGS

The following items are available in the menu:

- "Lights"
- "Units & Language"
- "Clock and Date"
- "Passive Safety"
- "Convenience & Comfort"
- "Doors & Locks"
- "Instrument panel"
- "Infotainment"
- "System"

## PERFORMANCE

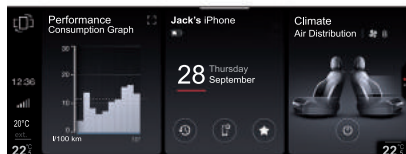


44

12126S0400EM

The main screen shows information about:

- "Technical gauges"
- "Consumption history"
- "Efficient Drive"
- "Engine torque"
- "Temperatures" (QV version only)
- "Drag Race" (QV version only)
- "Performance content" (where provided)

## CAR INFORMATION

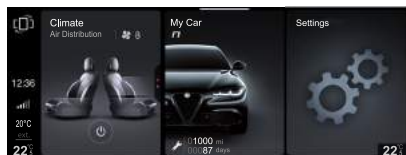

45

12126S2305EM

The main screen shows information about:

- Service (scheduled servicing)
- TPMS (Tyre Pressure Monitoring System)
- Engine oil level
- AdBlue® level (only Diesel versions) (where provided)
- Alfa DNA™ system

## ALFA CONNECT SERVICES

(for versions/markets where provided)



## OFFICIAL TYPE APPROVALS

### RADIO EQUIPMENT

All radio equipment provided with the car complies with Directive 2014/53/EU, UA.RED.TR, the French SAR Decree Law of 15/11/2019 and the UKCA (UK Conformity Assessed) Certification of 01/01/2021 in force in the United Kingdom.

For more information go to [www.mopar.eu/owner](http://www.mopar.eu/owner) or <http://aftersales.fiat.com/elum/>

### RADIO FREQUENCY DEVICES

All radio frequency devices comply with the regulations in force in the countries in which they are sold.

For more information go to [www.mopar.eu/owner](http://www.mopar.eu/owner) or <http://aftersales.fiat.com/elum/>



FCA Italy S.p.A. – MOPAR – Technical Service Operation  
Via Adige 7, 10040 Rivalta di Torino (TO) – Italy  
Print no. 603.93.793 - 10/2022 - 2 Edition



*La meccanica delle emozioni*